

# CAROMA FLOW - ADJUSTABLE WALL SHOWER

## WATER EFFICIENT SHOWER OUTLET

(NOMINAL FLOW RATE = 6.5 L/min)


### PLUMBERS INSTALLATION INSTRUCTIONS

#### Important Information

- \* Shower outlet is fitted with an 7 L/min flow regulator.
- \* Not suitable for gravity feed systems.
- \* All pipework must be thoroughly flushed prior to installation, as foreign materials may block the flow regulating device and reduce the flow of water.
- \* Turn off hot and cold water supplies before installation.

#### Installation

- 1) Check that threaded nipple (2) is the correct length, as shown. Cut to length if required ensuring end face is square. Apply thread tape to the thread, to provide a watertight joint on assembly.  
**Important:** Care must be taken that thread tape cannot become dislodged and block the flow regulating device, causing a reduction in water flow.
- 2) Place the cover plate (1) over the threaded nipple (2). Screw the inlet socket (3) onto the threaded nipple (2) and position shower as required. DO NOT OVERTIGHTEN.

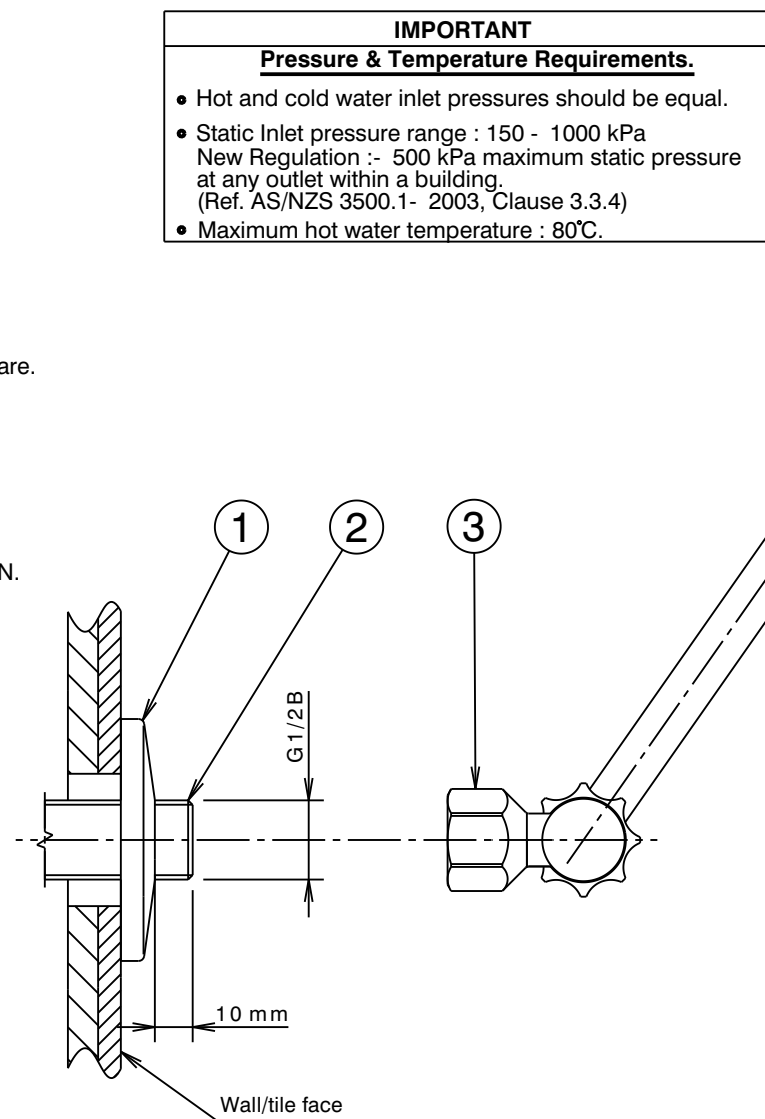

#### IMPORTANT

##### Pressure & Temperature Requirements.

- Hot and cold water inlet pressures should be equal.
- Static Inlet pressure range : 150 - 1000 kPa  
New Regulation :- 500 kPa maximum static pressure at any outlet within a building.  
(Ref. AS/NZS 3500.1- 2003, Clause 3.3.4)
- Maximum hot water temperature : 80°C.

#### SHOWERHEAD - SPRAY FUNCTIONS

- NORMAL SPRAY - ▲ (UP POSITION)
- RINSE SPRAY - ▼ (DOWN POSITION)