

PLUMBERS INSTALLATION INSTRUCTIONS

Important Information

- * Not suitable for gravity feed systems.
- * Wall basin outlet is fitted with a 5 L/min flow regulated aerator insert.
This low flow rate may not be suitable for connection to some Instantaneous Gas Water Heaters, some Tempering Valves, some Solar Water Heaters & some Thermostatic Mixing Valves.
Check with the manufacturers of these products.
Note: – An 8 L/min aerator insert kit (Part No. 20742), is available if required.
- * All pipework must be thoroughly flushed prior to installation, as foreign materials may block the flow regulating device and reduce the flow of water.
Note: Aerator insert housing must be retightened to prevent removal by hand.

Installation

- 1) Check that threaded nipple (1) is the correct length, as shown. Apply thread tape to the thread.
Important : Care must be taken that thread tape cannot become dislodged and block the flow regulating device, causing a reduction in water flow.
- 2) Screw the inlet of the wall basin outlet (2) onto the threaded nipple (1) and position as required. DO NOT OVERTIGHTEN.

IMPORTANT
<u>Pressure & Temperature Requirements.</u>
<ul style="list-style-type: none"> • Hot and cold water inlet pressures should be equal. • Inlet pressure range : 150 – 1000 kPa New Regulation : –500 kPa maximum operating pressure at any outlet within a building. (Ref. AS/NZS 3500.1 – 2003, Clause 3.3.4) • Maximum hot water temperature : 80°C.

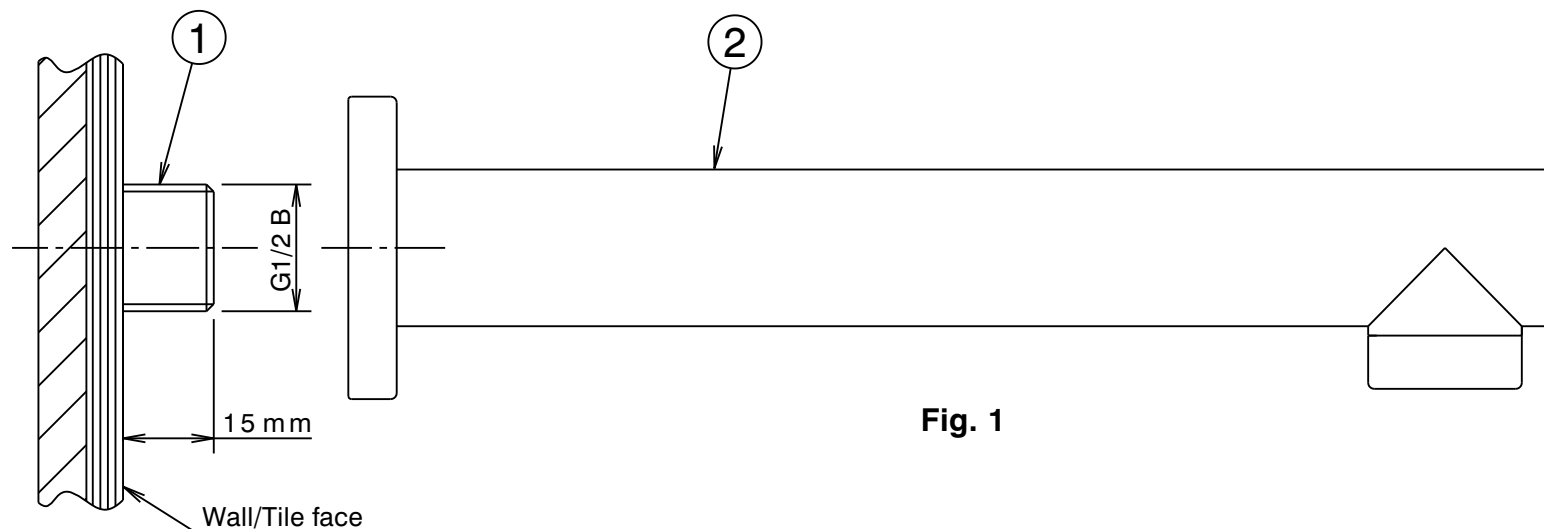


Fig. 1