www.phoenixtapware.com.au

Vivid Slimline Water through Rail Shower Instructions

WATER SUPPLY REQUIREMENTS





Recommended Working Pressure

temperature


Note:


- -If the pressure exceeds or is likely to exceed 550kpa, an approved pressure limiting device must be installed.
- Flush out all pipe work prior to installation.
- If the water temperature exceeds 75°C, an approved tempering valve must
- Installation should comply with Australian standard AS3500.1 or relevant local authority requirements
- -Showers may not be suitable for use with gravity-fed water heaters, low-pressure supply networks or some instantaneous water heaters. NOTE: Some showers with nominal flow rates of less than 7.5lt/min may not provide an effective shower when used with gravity-fed water heaters, low-pressure supply networks or some instantaneous water heaters.

Failure to comply with the above may void all warranties.

Maintenance and Care

- -Chrome plated surfaces should be cleaned with mild liquid detergent or
- **-Do not** use cream cleaners or citrus based cleaning products, as they are
- -Use of unsuitable cleaning agents may damage the surface. Any damage caused in this way will not be covered by warranty.

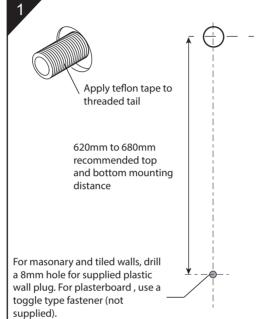

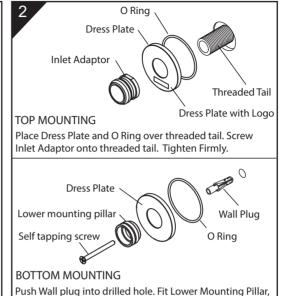

Dress Plate and Oring over the Wall Plug and screw in

place with screw. Tighten firmly.

