

INSTALLATION, OPERATION AND MAINTENANCE INSTRUCTIONS



RBA Modular Rails

RBA4600-Series



| | |
|--------------|-------------------|
| Model | RBA Modular Rails |
| Date | 26/04/19 |

Supersedes all previous

YOU ARE RESPONSIBLE FOR THE SAFE OPERATION OF THIS UNIT

Attention

For optimum installation use at least 4 suitable screws for each wall/ plate. Screws should be selected to suit the wall type.

Grab Rails are no stronger than the anchors or walls to which they are attached, and therefore, must be firmly secured in order to support the loads for which they are intended.

Maintenance and cleaning instructions

Do not use detergents containing bleach, acids, alkalis, or chlorine or abrasive products. Do not use abrasive objects (e.g. scouring pads). Do not use chemicals that can damage plastic. Clean the surface with water and a neutral detergent; rinse carefully and dry with a clean cloth. If alternative cleaning methods and/or chemicals are used, warranty may become void.

Important Warnings

Exceeding the maximum load values may cause permanent product damage. If this happens, cease use until checked by a specialised maintenance person. Improper use, such as for gymnastic exercises or as a step, may cause accidents with serious consequences. Reliable operation and product safety depend on the way the products are installed and used.

Ensure installation is performed by qualified personnel. Incorrect installation can seriously compromise product functionality.

Tools Required

Plumbers Tape
Screw Driver
Extended Driver Bit
Spirit Level

Components Supplied



1x Rail



2x Flange Cover



2x Wall Plate

• 2x Flange Button



2x Bracket Post



2x Bolt




6x Screw



6x Pin

INSTALLATION, OPERATION AND MAINTENANCE INSTRUCTIONS

1. Lay rail flat with thread facing up.

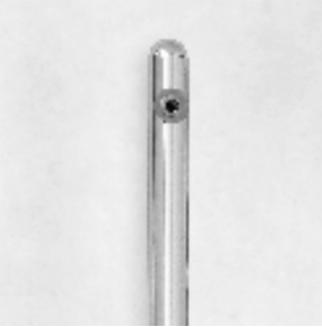

2. Place bracket post onto rail.




3. Slide flange cover over post.



4. Insert bolt through wall plate.



5. Insert fixing wall bracket and assemble.

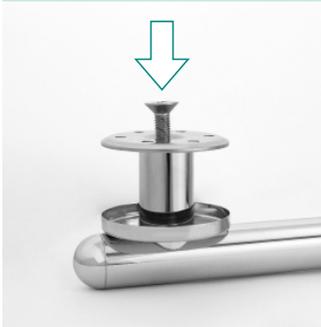

6. Tighten.



7. Straighten the rail.



8. Mark location to install.



INSTALLATION, OPERATION AND MAINTENANCE INSTRUCTIONS

9. Position flange cover so the hole is over the screw fixing point. Secure the first screw.



10. Rotate the flange cover so the hole is positioned over a new screw fixing point.



11. Repeat until four screws are securing the wall plate.



12. Fix horizontal rail to wall. Push flange cover over wall plate and insert flange button.

