

Maintenance and Care Instructions

Maintenance of the refrigeration unit must be carried out by an accredited service provider or qualified refrigeration technician.

Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.

Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.

Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance. To avoid hazards, all installation procedures must be carried out by a suitably qualified tradesperson.

The power cable and power outlet must be in a safe visible position for connection. Sometimes steam and / or boiling water droplets may discharge through a vent outlet on the tap. If not using the front, ensure the tap body is located so the tap outlet safely dispenses into the sink bowl.

The Zip HydroTap operates within the ambient temperature range 5°C- 35°C. Proper air circulation must be provided. The system will operate satisfactorily only if the recommended air gaps are provided. The vent kit supplied must be fitted. To clean all taps, Command Centre and ancillaries, wipe external surfaces with a gentle cleaning agent or a damp cloth and then wipe dry immediately with a clean, dry cloth.

Do not use strong, corrosive, spray, or abrasive cleaners.

Command Centres must never be located near or cleaned with water jets.