

# INSTALLATION GUIDE

## Kwiksemble Vanity

Point your smartphone camera at the  
QR code below to watch the  
step-by-step assembly video!  
Or search Kwiksemble on Youtube




<https://www.youtube.com/watch?v=USMQKJRZQxw>


### IMPORTANT!

- Thoroughly inspect all parts and components for damage or defects. Warranty claims for damage or defects will not be accepted after installation.
- Read through these instructions carefully and retain for future reference.
- It is recommended that this vanity unit is installed by a licensed trades person.
- All plumbing must be installed by a licensed plumber.
- Under no circumstances should vanities and/or basins be tiled into the wall.
- This product must not be installed in an area where it may be exposed to splashing water from a bath or shower.


### PARTS

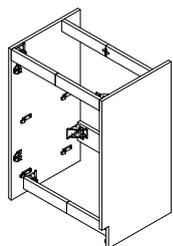


1x pre-assembled  
foldable cabinet

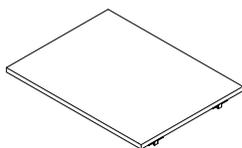


1x pre-assembled  
base board

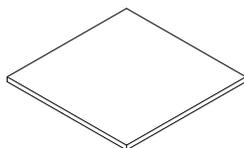

1x pre-assembled  
shelf

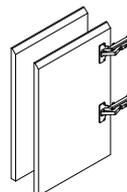

2x pre-assembled  
doors

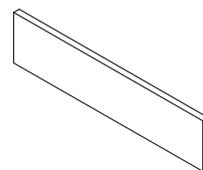


1x kickboard

### INSTALLATION



1. Unfold the main cabinet until all hinges click into place. Tip - Open each side in small increments at a time to evenly open the cabinet.

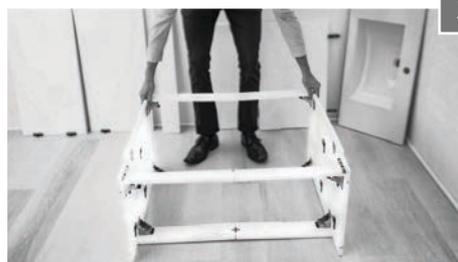

2. Gently lay the cabinet down on its back. Tip - Help protect the cabinet by placing a towel down over hard surfaces.



3. Install the baseboard shelf and middle shelf. Tip - slide each shelf into position evenly, align the interlocking black brackets and press into position.



4. Install the kickboard. Tip - Align the brackets on both sides and press firmly into position.




5

5. Install the doors. Tip - Align the small hooks on the door hinge into position & then lift the tab on the end of the door bracket and press into position.




6

6. Stand the cabinet up and check the doors for alignment. Tip - Small adjustments can be made to align the doors by turning the 2 screws in the middle of each hinge.

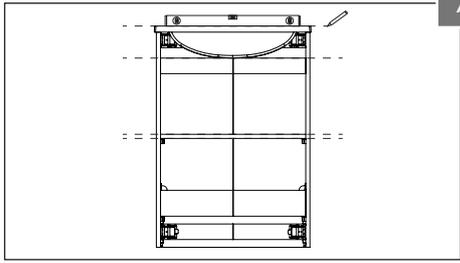

7

7. Position cabinet in desired location ensuring the cabinet does not foul with existing plumbing. If you have a floor waste pipe, you will need to mark out the location on the base board and shelf of the cabinet and using a hole saw, drill a hole to suit the size of the plumbing in the marked-out location.

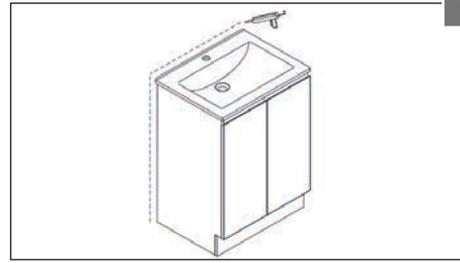

8

8. Once the vanity top (available separately) is installed, we recommend applying anti-fungal wet area silicone to seal the back and sides at the wall junction to ensure water cannot get behind the vanity and cause damage. Allow recommended drying time (refer to sealant instructions) before first use.

---

## CAUTION!

· This vanity cabinet is NOT designed to carry the weight of child or an adult. To avoid injury and damage to the vanity cabinet, never sit on, stand on, or hang off the installed wall hung cabinet.

---

## CARE AND MAINTENANCE

- Wipe down the vanity using warm soapy water on a damp cloth.
- Do not use harsh detergents, corrosive chemicals, or abrasive cleaners.
- When cleaning the cabinet, make sure all moisture from the damp cloth has been removed with a dry cloth.
- The cabinet is water resistant not waterproof. Make sure that the bathroom is well ventilated to prevent moisture build up. Do not allow water to sit on vanity for a long time, ensure that the water is removed as soon as possible to prevent swelling.