


INSTALLATION GUIDE

Kwiksemble Wall Hung Vanity


IMPORTANT!

- Thoroughly inspect all parts and components for damage or defects. Warranty claims for damage or defects will not be accepted after installation.
- Read through these instructions carefully and retain for future reference.
- It is recommended that this vanity unit is installed by a licensed trades person.
- All plumbing must be installed by a licensed plumber.
- Under no circumstances should vanities and/or basins be tiled into the wall.
- This product must not be installed in an area where it may be exposed to splashing water from a bath or shower.
- The included fixings are suitable for solid walls only. It is the installer's responsibility to ensure that the correct fixings are used to suit the wall type, and the cabinet is mounted to a structure suitable to support the weight of the entire vanity unit.
- Ensure the wall is plumb and straight before fixing the wall hung cabinet. If the wall is bowed and not straight, the cabinet may become warped and cracked and place increased pressure on joints.


PARTS

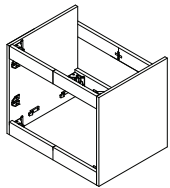


1x pre-assembled foldable cabinet

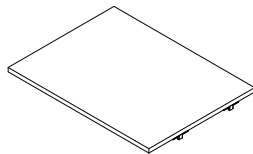

1x pre-assembled base board

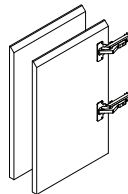

2x pre-assembled doors

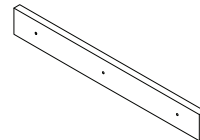


1x bracket



7x screws & wall plugs

INSTALLATION

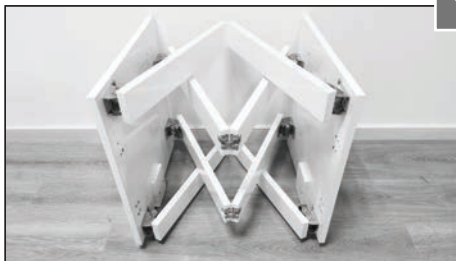


1. Unfold the main cabinet until all hinges click into place. Tip - Open each side in small increments at a time to evenly open the cabinet.



2. Gently lay the cabinet down on its back. Tip - Help protect the cabinet by placing a towel down over hard surfaces.



3. Install the baseboard. Tip - slide each shelf into position evenly, align the interlocking black brackets and press into position.

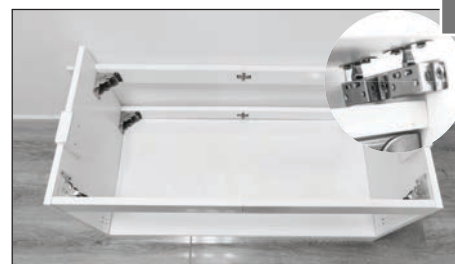


4. Install the baseboard. Tip - Align the brackets on both sides and press firmly into position.




5. Install the doors. Tip - Align the small hooks on the door hinge into position & then lift the tab on the end of the door bracket and press into position.




6. Stand the cabinet up and check the doors for alignment. Tip - Small adjustments can be made to align the doors by turning the 2 screws in the middle of each hinge.

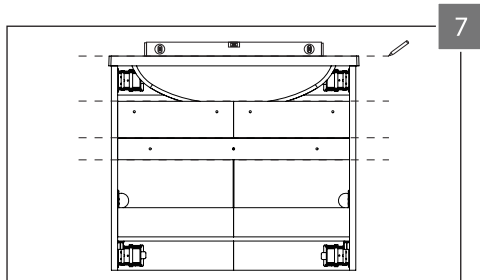


7. Use a spirit level to mark a straight line on the wall at the desired height (also take into consideration the height of the vanity top). Work out the location of plumbing (hot and cold water and waste water outlets) in relation to the vanity and vanity bracket. Ensure plumbing will not foul with vanity. Measure the distance between the cabinet bracket and mark the centre as a guide for the wall bracket.

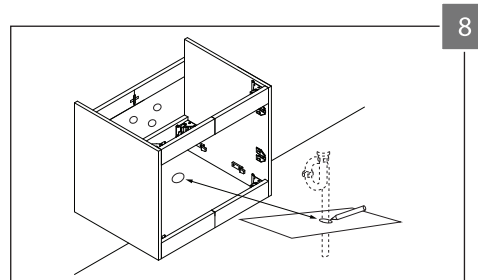


8. If you have a floor waste pipe, you will need to mark out the location on the base of the cabinet and using a hole saw, drill a hole to suit the size of the plumbing in the marked-out location.

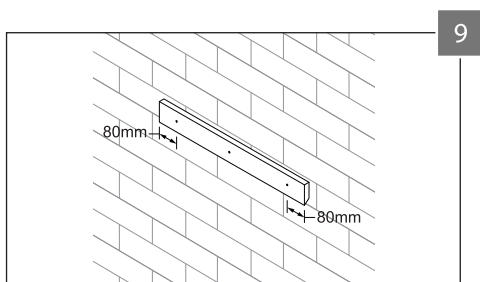

9. Position the wall bracket onto the wall and mark the drilling locations.
NOTE: The above dimensions should be used as a guide only. It is the installers responsibility to ensure the accuracy of drilling measurements by checking the actual product.

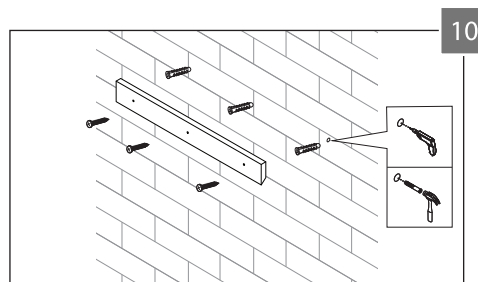

10. Using an appropriate drill bit (i.e. masonry bit for tiles), drill holes to suit the wall plugs. Carefully knock the wall plugs into the drilled holes. Secure the fixed bracket to the wall with the included screws.
NOTE: The supplied fixings are designed for use with concrete/brick walls. For any other wall types, it is the responsibility of the installer to ensure that a suitable fixing method is used.

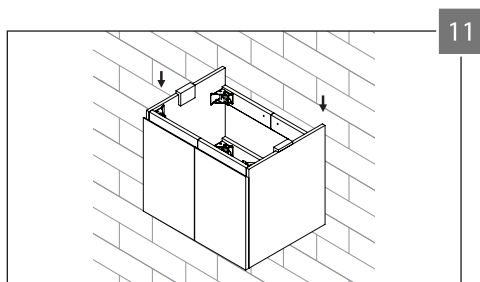

11. Mount the cabinet to the wall ensuring the cabinet bracket hooks into the wall panel and screw fix into place. Ensure the cabinet is fixed to the wall and is secured and sturdy and will take the load. Note: We recommend applying anti-fungal wet area silicone to seal the vanity to the wall.

CAUTION!

Take care to **NOT** drill into existing plumbing and any electrical wiring. It is the installers responsibility to check the locations of existing plumbing and electrical wiring.

CAUTION!

• This vanity cabinet is NOT designed to carry the weight of child or an adult. To avoid injury and damage to the vanity cabinet, never sit on, stand on, or hang off the installed wall hung cabinet.

CARE AND MAINTENANCE

- Wipe down the vanity using warm soapy water on a damp cloth.
- Do not use harsh detergents, corrosive chemicals, or abrasive cleaners.
- When cleaning the cabinet, make sure all moisture from the damp cloth has been removed with a dry cloth.
- The cabinet is water resistant not waterproof. Make sure that the bathroom is well ventilated to prevent moisture build up. Do not allow water to sit on vanity for a long time, ensure that the water is removed as soon as possible to prevent swelling.