



CAROMA

COOLIBAH CONTEMPORARY LEVER - WASHING MACHINE SET

PLUMBERS INSTALLATION INSTRUCTIONS

Important Information

- * All pipework must be thoroughly flushed prior to installation.
- * Turn off hot and cold water supplies before installation.

Installation

- 1) Check that threaded nipple (2) is the correct length, as shown. Cut to length if required ensuring end face is square. Apply thread tape to the thread.
- 2) Place the cover plate (1) over the threaded nipple (2). Screw the tap body (3) onto the threaded nipple (2) and position as required. DO NOT OVERTIGHTEN.
- 3) Fit handle assembly as follows:-
 - i) With cartridge spindles in the fully closed position, fit handle insert (6) onto spindle (5) and using the retaining screw (9) as a guide when fitted to handle (8), position handles (8) as shown in Fig.2 before pushing handle (8) fully onto handle insert (6). For small adjustments to handle positions, cartridge can be rotated **slightly** in an anti-clockwise direction until handles are aligned (Fig.2) before tightening locknut (4). Remove handles (8).
 - ii) Secure handle insert (6) to spindle (5) using screw (7).
 - iii) Position each handle (8) on handle insert (6) as before then push it firmly down until it bottoms internally.
 - iv) Tighten retaining screw (9) with allen key (10) provided. Slide 'O'ring (11) onto screw (9). Screw handle lever (12) onto retaining screw (9) and tighten firmly by hand, taking care not to damage the decorative finish.

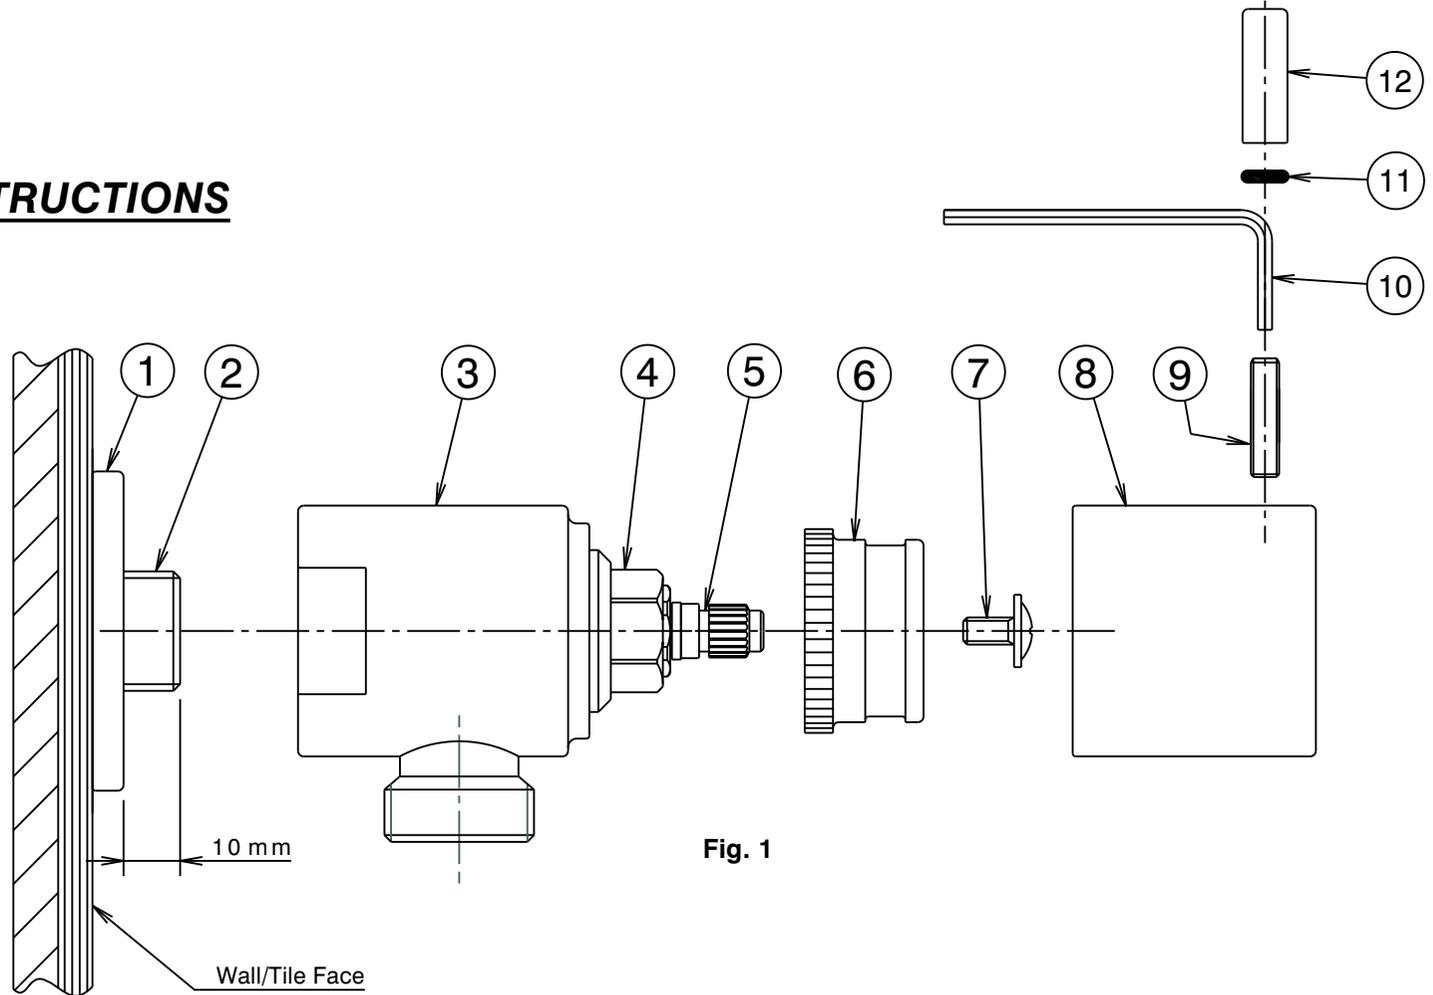


Fig. 1

IMPORTANT	
<u>Pressure & Temperature Requirements.</u>	
•	Hot and cold water inlet pressures should be equal.
•	Inlet pressure range : 150 -1000 kPa New Regulation: 500 kPa maximum static pressure at any outlet within a building. (Ref. AS/NZS 3500.1)
•	Maximum hot water temperature : 80°C.

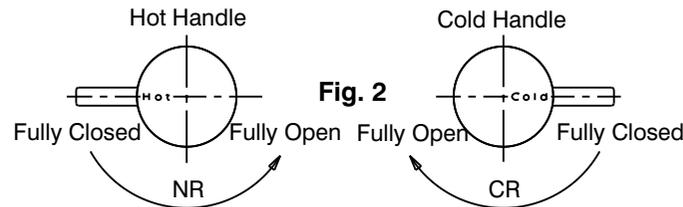


Fig. 2