

INSTALLATION INSTRUCTIONS

TYPE A LARGE CLINICAL SCRUB BASIN

PRODUCT CODE:
J3090




The Type A basin is a large, clinical scrub basin that requires rag bolts as well as a waste support bracket for support.

If installing onto a stud wall a reinforcing noggin is required, this should be fitted centred on the height of the mounting rag bolts.


NOTE: Normal installations of this type of basin utilise wall mounted tapware. Overflows are usually not specified for hygiene reasons.

INSTALLATION STEPS


- 1 Drill Ø14mm holes for basin and waste support bracket

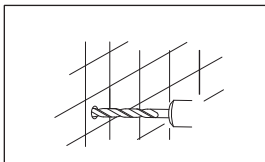


- 2 Insert wall plugs. Screw in rag bolts and fix the waste support bracket.

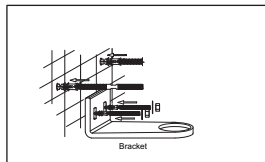

- 3 Attach wash basin. Insert rubber washer and adjust the bracket.

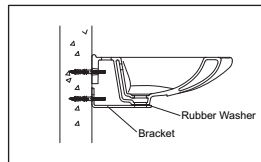

- 4 Insert nylon flange washers and tighten nuts.

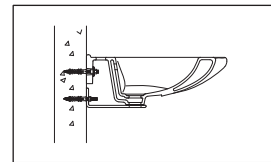

DIMENSIONS

