
GENERAL INSTALLATION INSTRUCTIONS for WALL and PEDESTAL/SHROUD MOUNTED BASINS





These instructions can be used as a general guide for installing wall basins that use the rag bolt mounting method.

NOTE: when installing onto a stud wall a reinforcing noggin is required, this should be fitted centred on the height of the mounting rag bolts.

The diagrams A,B,C illustrate the basin types that are covered by these instructions:

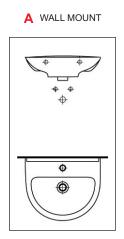

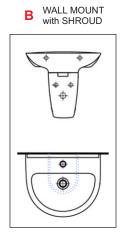




Tel: 1300 717 717

Fax: 1300 746 480 www.johnsonsuisse.com.au

INSTALLATION STEPS

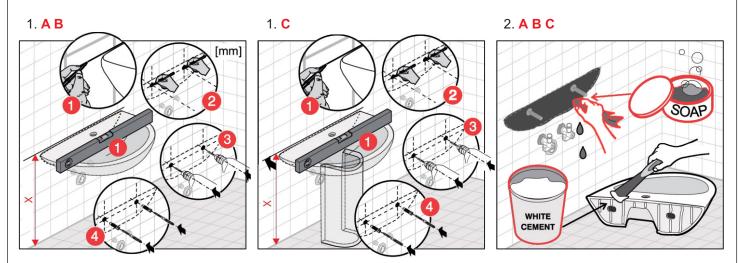

GENERAL INSTALLATION INSTRUCTIONS for WALL and PEDESTAL/SHROUD MOUNTED BASINS



Tel: 1300 717 717 Fax: 1300 746 480 www.johnsonsuisse.com.au

