



RAYMOR


Classic II Rimless P trap

Couple Toilet Suite

Installation set out for Classic II Rimless Close couple Toilet Suite

Product Code: STD Seat Suite 194380

SET OUT DRAWING

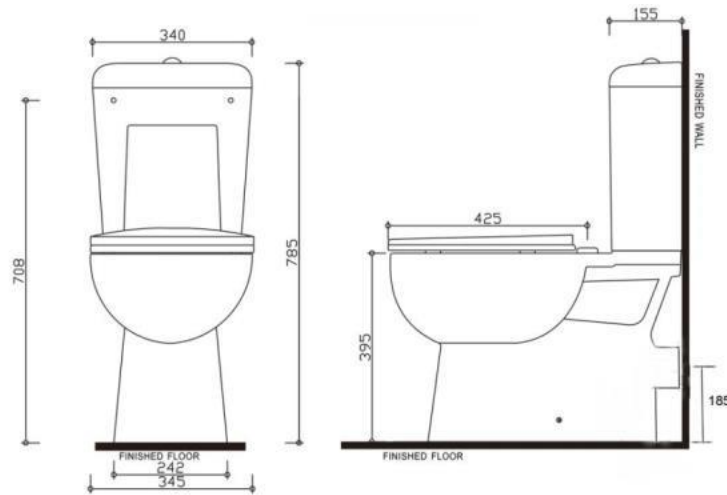

Remove all products from packaging:

Check the product for damage, if the product is damaged return to the store of purchase, Check the product is complete with all components required to install.

This product is to be installed by a licensed plumber, failing to do so will void warranty. This product is to be installed as per Australian Standards and local authority requirements.

Warning: Do not bed the pan in place using cement, concrete OR SIMILAR MATERIAL, DOING SO WILL VOID THE PRODUCT WARRANTY.

Toilet Suite Installation

Toilet Pan Installation

N.B The distance from the back edge of the pan to the start of the 'P' trap is 10mm(due to shrinkage variations please measure the distance on the pan to confirm) taking into account full engagement of the pan collar on the 'P' trap. Install waste pipe as per Australian standards and local authority requirements. The distance from the floor to the center of the 'P' trap is 185mm, set your waste pipe height accordingly.

1. Mark the centre line of the Pan connector on the wall for 'P' trap installation.
2. Place the pan into position centralising the pan on your centre line, draw around the pan base and mark the entry points on the floor to where the floor fixing holes are on the side of the pan.
3. Remove the pan and drill and screw into place the floor fixing brackets, set the floor fixing brackets 15mm inside the line drawn around the base. Use suitable floor fixing screws & toggles to suit the floor material.

4. Critical, the pan must be on a level surface square to the wall, if the floor slopes away the pan will need to be levelled using suitable floor chocks around the pan to support and stabilise the pan.

Toilet cistern installation

1. Marking Cistern wall fixing holes- place cistern onto Pan without sponge gasket, square up cistern to pan and mark wall through cistern fixing holes, remove cistern and drill wall and fit wall plugs based on wall material.
2. Locate the cistern on to the pan with the sponge gasket placed on the cistern outlet valve tail and connect the tank to pan using attachment bolts. Ensure that the cistern and pan are in contact when tightened DO NOT OVER TIGHTEN.
3. Screw cistern to wall using suitable screws and preassembled wall plugs.
4. Connect one end of the supplied Female to female Flex connector to the inlet valve (DO NOT OVERTIGHTEN), connect the other end to mains Water. (DO NOT OVER TIGHTEN).
5. Place cistern lid on top of the cistern and check push button workability.
6. Assemble the seat using the seat assembly instructions supplied in the seat box

Important: Sand and debris move through water pipes. Always flush the line prior to connecting Toilet Suite inlet pipe to water control valve.

Warranty Contact Details:

Tradelink Pty Ltd

ABN: 29000003832

1051 Nudgee Rd

Banyo QLD 4014

Ph: 1300 658 277

Warranty@Tradelink.com.au

Warranty:

For continued peace of mind, this product comes with limited warranty from date of purchase. For full warranty terms and conditions of the warranty including how to claim and your rights as a consumer, please consult www.raymor.com.au.

"If you are a consumer as defined under the Australian Consumer Law, our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure."

Issue Date: 10 Oct 2020

Revision Number: 1.0

Revision Date: N/A