

## INSTALLATION INSTRUCTIONS

ULTRA COMPACT SHOWER BATH 1050 x 700mm Code J5050

COMPACT SHOWER BATH 1200 x 700mm Code J5060



### Benefits & Features:




- ▲ **LOW DAMAGE RISK:** As the bath is installed at the final stage of construction the possibility of surface damage by other trades is reduced.
- ▲ **IMPROVED WATER SEAL:** Water seal of wet area in the bathroom is not compromised with any membrane penetrations or cut out flashing.
- ▲ **QUICK INSTALLATION:** Fast and cheap installation method.
- ▲ **CUSTOM SUPPORT:** If necessary the bath can be completely removed without causing damage to surrounding wall or floor tiles.
- ▲ **MODERN DESIGN:** Stylish with easy clean lines. Two sizes available - 1050 and 1200
- ▲ **VITREOUS ENAMEL FINISH:** Three separate enamel layers for maximum damage protection and hygiene with the benefit of the strength of steel.

# COMPACT SHOWER BATHS INSTALLATION INSTRUCTIONS




Congratulations on the purchase of your new Johnson Suisse bath. Please read these instructions carefully.

- Unpack and check for damage. Any damage should be reported promptly.
- Protect the bath during the installation. Damage and scratching incurred during installation are not covered by the warranty.




## Method A: Installation with Legs

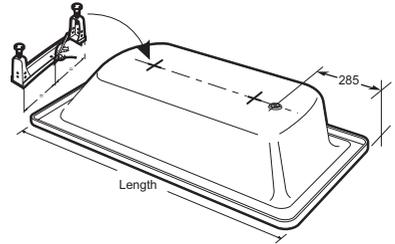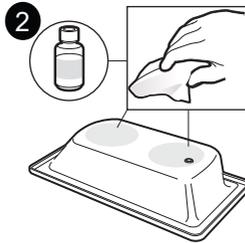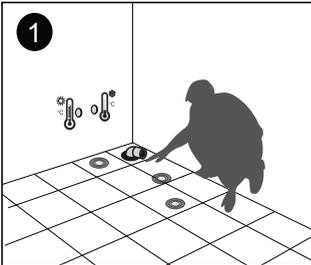

1. Before installation set out the pipe work for the bath and ensure it is aligned with the waste.
2. Clean the base of bath and install the bath legs according to supplied instructions.
3. To prevent scratching of the enamelled surface use a piece of soft plastic under the bath

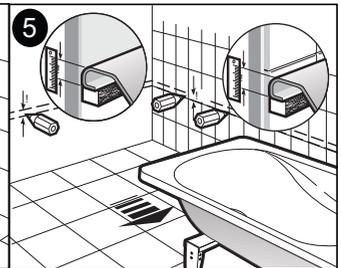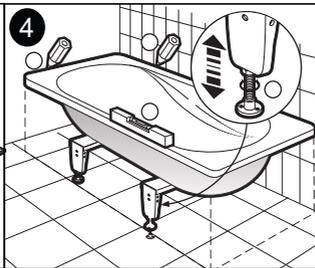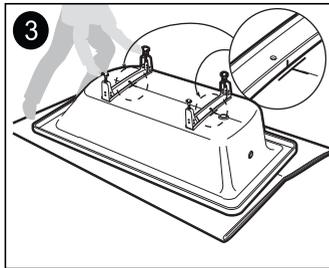


4. Place in position and use the adjusting screws to ensure the bath is completely level. Make sure that the underside of the bath is clear of any obstructions.
5. Mark the height of the bath tub on the wall to provide the guidelines for the bath rim supports.

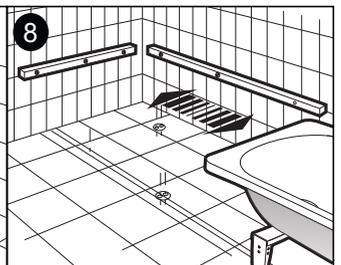
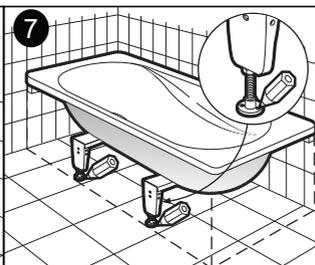
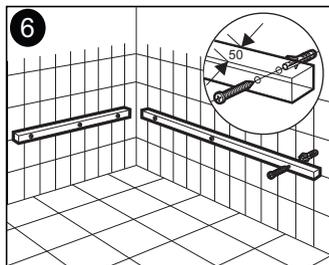


6. The bath rim must be supported on the sides against the walls.

# COMPACT SHOWER BATHS INSTALLATION INSTRUCTIONS

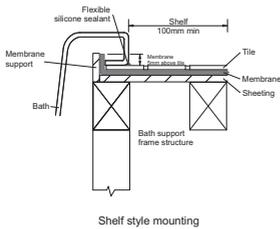

Shelf style mounting

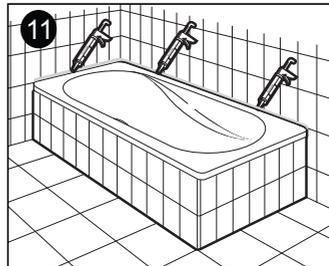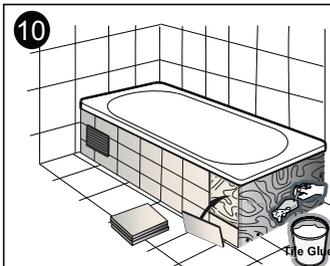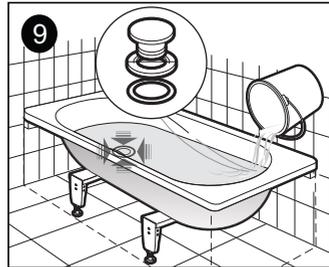


**E** = Sheet + Tile thickness

7. Position and fix the bath legs to the floor.
8. A minimum gap of 1-3mm between the bath and wall/tiles is recommended to provide space for normal expansion of bath in different temperatures. This gap will be filled with silicon.
9. After fixing the bath into position connect approved DN40 waste fittings and pipe.
10. Once the connections are completed fill the bath tub with water, wait for 2 hours and check for water leaks.
11. Complete the installation of bath by either desired method (Timber frame or masonry)  
Note use 40x40mm timber when constructing a frame with vertical studs at 450-500mm centres. Suggested frame height is 500mm.
12. When cladding the base wall it is recommended that a removable panel provided to allow access to the waste pipe for any service that may be required in the future.
13. All the points of contact between the bath and the side walls should be filled with silicone.
14. The bath can be used after 24 hours.



All dimensions are in millimetres and are subject to normal manufacturing variation.  
As product development is ongoing BPA reserves the right to vary specifications without notice

# COMPACT SHOWER BATHS INSTALLATION INSTRUCTIONS

## Method B: Built-in Installation without Legs

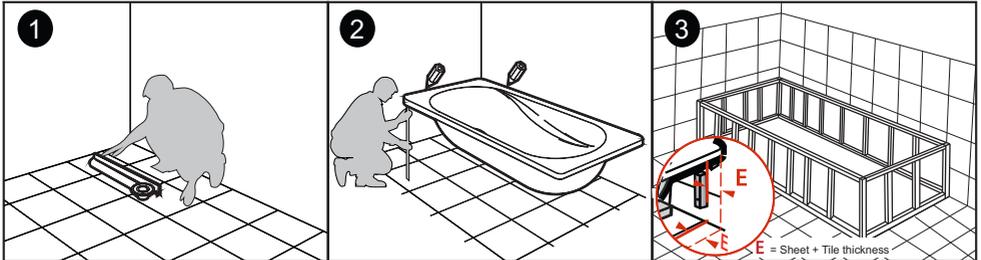


1. Find the desired height of the bath on the wall. A minimum clearance of 10mm is required under the floor of the bath to allow free flexing of the entire bottom of the bath.  
Note: use 40x40mm timber when constructing a frame with vertical studs at 300-350mm centres. Suggested frame height is 500mm.
2. Set up the desired support structure. The waste pipe and flexible coupling should be wrapped with suitable material to be protected if exposed to debris or immersed in cement.

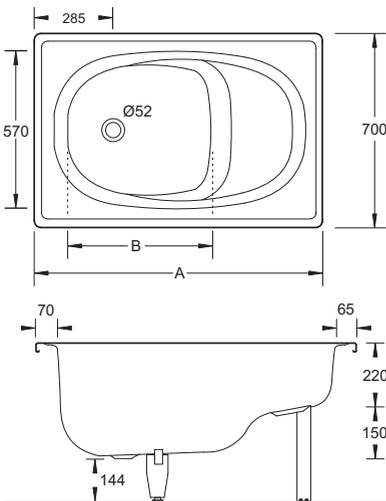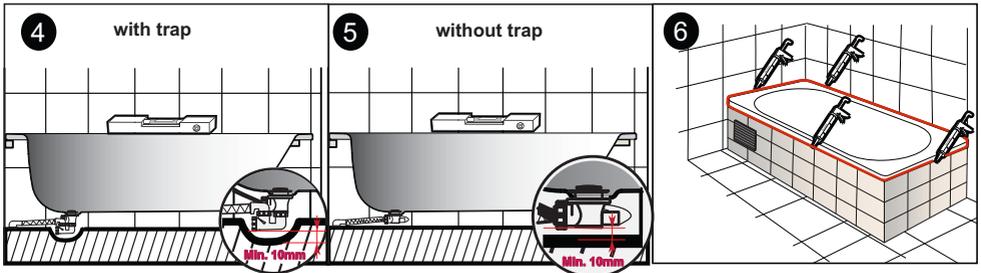

**Bath Specifications**

Code	A	B	Vol.(L)
J5050	1050	525	±80
J5060	1200	645	±90

**Shelf style mounting**

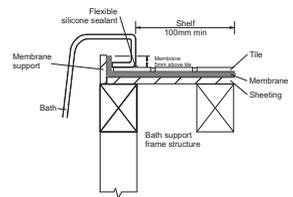

**Special notes:**

1. Installation must comply with the Plumbing Code of Australia and any Local Authority requirements.
2. Compliance with AS:3740 Waterproofing of Wet Areas within Residential Buildings applies when installing baths.
3. The bath must be supported continuously and evenly under the entire rim.
4. Flexible sealant must be applied to the exposed edges.
5. Ensure that all the water connections are leak-proof and water sealed and the bath drains properly.
6. Forces must not be applied to the bath by excessively rigid or misaligned pipework.
7. Air space beneath the bath should be ventilated to meet the local code requirements.
8. Clean with mild detergent or non-abrasive cleaner only. Rinse the bath clean to remove any residues.
9. Avoid contacting sharp objects. Do not drop heavy or hard objects onto the surface.
10. All dimensions are in millimetres. Bathroom Products Australia undertake continuous product improvement and reserve the right to change the specifications without notice.