

PLUMBERS INSTALLATION INSTRUCTIONS

Important


- * The wall elbow (4) is fitted with a single flow regulated check valve (6). Additional backflow prevention may be required if installing over a bath or other receptacle.
Note: Warranty is void if check valve (6) is not installed as shown.
- * Not suitable for gravity feed systems.
- * The flow of water to the handshower is regulated. This lower flow rate may not be suitable for connection to some gravity fed Water Heaters, low pressure supply networks, Instantaneous Water Heaters, Tempering Valves, Solar Water Heaters & Thermostatic Mixing Valves. Check with the manufacturers of these products.
- * All pipework must be thoroughly flushed prior to installation, as foreign materials may block the flow regulating device and reduce the flow of water.

Installation

- 1) Check that threaded nipple (1) is the correct length as shown. Cut to length if required ensuring end face is square. Apply thread tape to the thread.
Important: Care must be taken that thread tape cannot become dislodged and block the flow regulating device, causing a reduction in water flow.
- 2) Fit seal (2) into groove in base of cover plate (3). Screw wall elbow (4) together with cover plate (3) onto threaded nipple (1) and position so that the hose (10) will hang vertically down. DO NOT OVERTIGHTEN.
- 3) Ensure that check valve (6) is in position in wall elbow (4) & retained with circlip (7). Check that rubber washer (8) is installed into the hexagon fitting (9) on shower hose (10) then screw onto wall elbow (4) and tighten. Check that rubber washer (11) is in position in the conical end fitting (12) of shower hose (10) then screw onto handshower (5) and tighten. Fit handshower (5) into holder (4a). Handshower holder inclination angle is adjustable by pivoting.
Important: If water does not flow from handshower (5) make sure that check valve (6) is installed with the arrow pointing in the direction of flow.

SHOWER HEAD - THREE FUNCTIONS

- NORMAL SPRAY. (Outer)
- COMBINATION SPRAY. (Outer + Inner)
- MESSAGE SPRAY. (Inner)

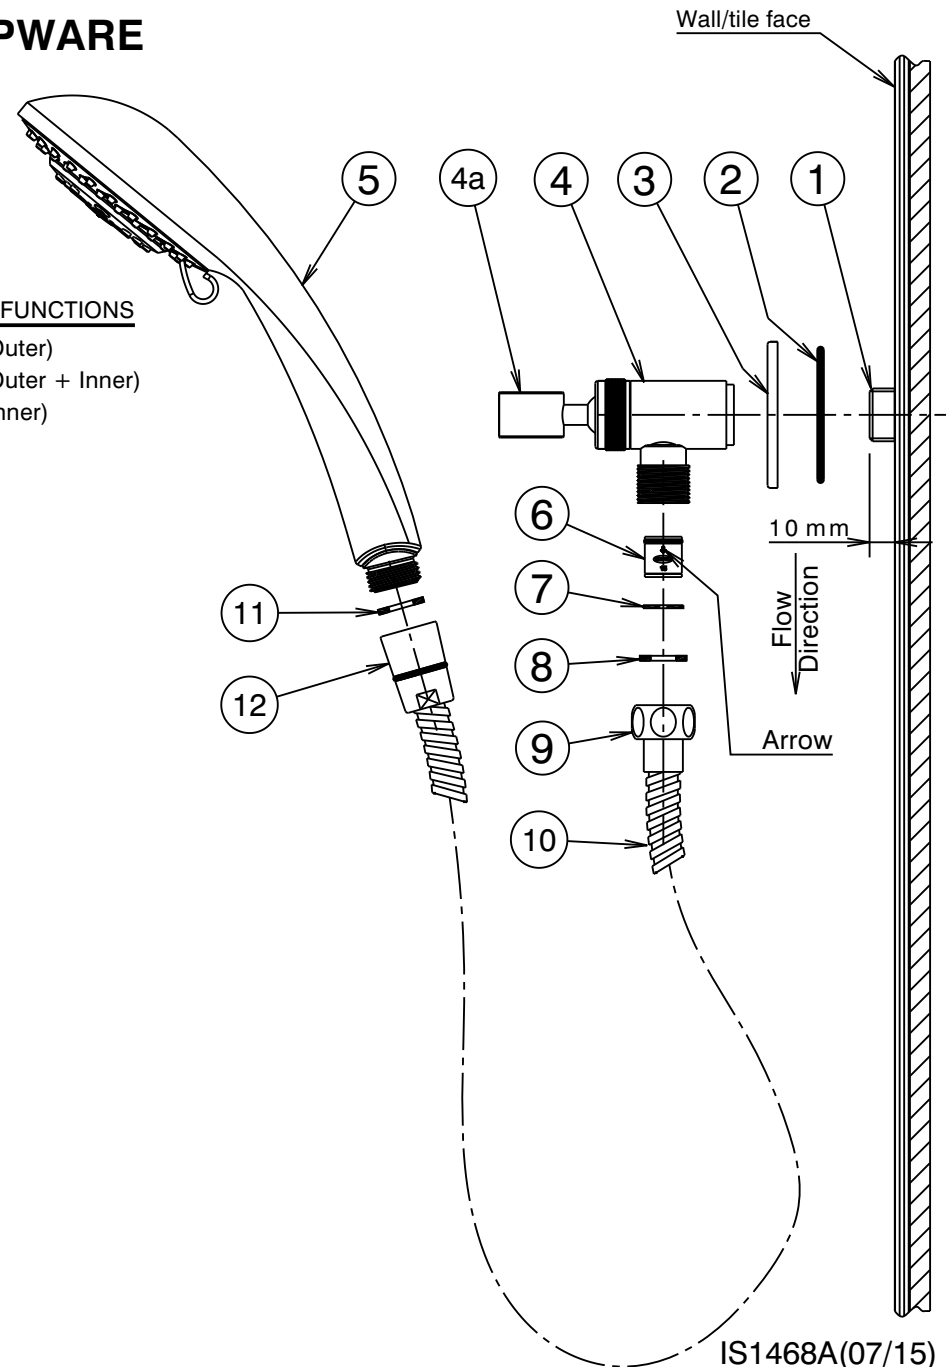

IMPORTANT

Pressure & Temperature Requirements.

- Hot and cold water inlet pressures should be equal.
- Static inlet pressure range : 150 -1000 kPa
New Regulation:- 500 kPa maximum static pressure at any outlet within a building. (Ref. AS/NZS 3500.1)
- Maximum hot water temperature : 80°C.