


Installation

Tip: Install product on bench before connecting second hose to mixer.


1. Cut a single 35mm diameter hole into the mounting surface.
2. Insert o-ring into the groove in the underside of the base ring and fit to base of mixer.
3. Feed the mixer's tails and the one fitted hose through the hole cut in the mounting surface.
4. Screw in all-thread studs and second supply hose into the base of the mixer.
5. Fit triangular spacer (optional) followed by clamp plate.
6. Secure in place with brass mounting nuts.
7. Connect the flexible hoses to the hot and cold supplies (Hot on left, Cold on right).

Note: Ensure that the in-line filter washers supplied are fitted during this connection.

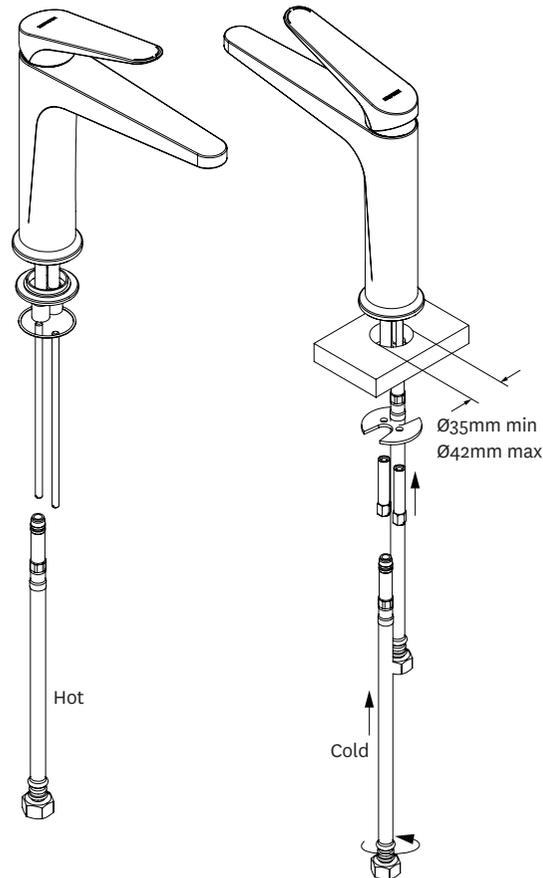

Maku Sink Mixer

01-8628

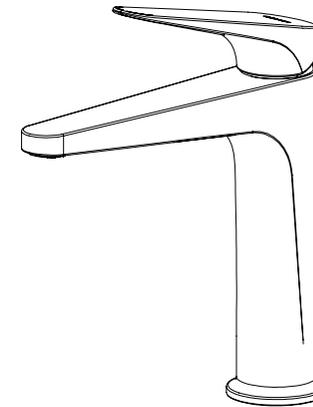

Installation Guide

IMPORTANT

Please read all of the instructions before installation

Use of this product is recommended for domestic and commercial applications. All pipework must be thoroughly flushed prior to the installation of the mixer. In-line filter washers must be installed on both hot and cold supplies to prevent foreign particles damaging the ceramic cartridge. Do not remove the ceramic cartridge from the mixer when installing.

Methven recommends a licensed plumber carry out all installations in compliance with the requirements of AS/NZS 3500. This product complies with AS/NZS 3718 regulations.





Technical Specification

Inlet Connections:	All 1/2" BSP
Operating Pressure:	150kPa - 500kPa
	For optimum performance hot and cold water pressures should be equal.
	AS/NZS 3500 stipulates a 500kPa maximum operating pressure at any outlet within a building. Where normal pressure exceeds 500kPa, a pressure limiting valve must be installed.
	This sink mixer is rated at 7.5l/m. If limited water flow is experienced, locate stream shaper flow restricting device and filter washers and clean away foreign material as required.
Operating Temperature:	Recommended hot water supply 50°C, maximum 70°C. AS/NZS 3500 requires all hot water supplies to any sanitary fitting to be tempered to 50°C.
Ceramic cartridges:	The ceramic cartridge can be damaged due to the presence of the following within the water supply:
	Copper tube pieces
	Plastic pieces
	Sand, dirt or stones
	Thread tape
	Other objects not normally present in the potable water supplies

Hose Requirement for Mixers

Do not hydrostatic test* the installation with this mixer installed. Damage to the ceramic cartridge may occur.
 *Hydrostatic testing refers to placing the system under pressure, above the recommended operating pressure, to determine water tightness and to uncover leaks or weak joints within the system.

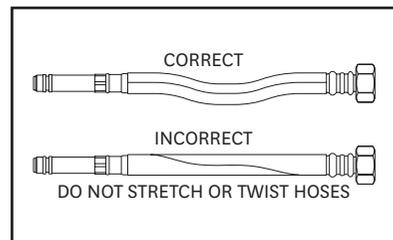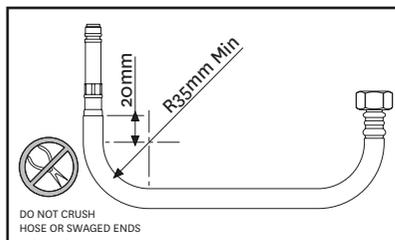

Care and Cleaning

Never use abrasives to clean this product. Clean regularly with contamination free warm soapy water and a damp soft cloth.

